

## **Updated: September 2024**

SL No.	Title Engine types
SL2024-760	Pitch feedback arrangement Mk. 5 propeller
SL2024-759	Hydraulic tools - High pressure pump Mk. 5 propeller delivered after Medio 2020
SL2024-755	Engine overspeed shutdown system (Replaces SL2023-750)  Marine: L21/31, L27/38  Stationary: L21/31S, L27/38S, V28/32S  Propulsion: L21/31, L27/38  Dual Fuel: L23/30DF, L28/32DF
SL2024-753	Update of fuel valve opening pressure  Marine: L27/38  Stationary: L27/38S
SL2023-750	Engine overspeed shutdown system Replaced by SL2024-755
SL2023-740	Overspeed  Marine: L16/24, L21/31, L27/38, L23/30H, L23/30H Mk2, L23/30H Mk3, L28/32H  Stationary: L16/24S, L21/31S, L27/38S, L23/30S, L28/32S, V28/32H, V28/32S  Propulsion: L21/31, L27/38, L23/30A, L28/32A, V28/32A  Dual Fuel: L23/30DF, L28/32DF
SL2023-734	Local monitoring control and safety, LMCS base module 2 replacement Propulsion: L21/31, L27/38, AMG-EV gearboxes
SL2022-724	Inlet and exhaust valve issues when operating on low-sulphur fuels  Marine: L16/24, L21/31, L27/38, L23/30H, L28/32H  Stationary: L21/31S, L27/38S, L23/30S, L28/32S, V28/32S, V28/32H  Propulsion: L21/31, L27/38, L23/30A, V23/30A, L28/32A, V28/32A
SL2022-721	Excessive wear on the locking keys of crankshaft thrust bearing  Marine: L27/38  Stationary: L27/38S  Propulsion: L27/38
SL2021-719	Cleaning of fuel injection nozzles  Marine: L16/24, L21/31, L27/38, L23/30H, L23/30H Mk2, L23/30H Mk3, L28/32H  Stationary: L16/24S, L21/31S, L27/38S, L23/30S, L28/32S, V28/32H, V28/32S  Propulsion: L21/31, L27/38, L23/30A, L28/32A, V28/32A  Not applicable for Dual Fuel engines
SL2021-718	Overspeed incident with disintegrated flywheel – Updated information L23/30 and L28/32 GenSet & Propulsion all versions incl. A/H/S/DF
SL2021-716	Reaming of valve guide after replacement  Marine: L16/24, L21/31, L27/38, L23/30H, L23/30H Mk2, L23/30H Mk3, L28/32H  Stationary: L16/24S, L21/31S, L27/38S, L23/30S, L28/32S, V28/32H, V28/32S  Propulsion: L21/31, L27/38, L23/30A, L28/32A, V28/32A  Dual Fuel: L23/30DF, L28/32DF



SL No.	Title Engine types
SL2021-713	Removal and re-installation of drive end hub on the crankshaft  Marine: L21/31  Stationary: L21/31S  Propulsion: L21/31
SL2021-712	Inspection of valve roller guide  Marine: L16/24, L21/31  Stationary: L16/24S, L21/31S  Propulsion: L21/31
SL2021-711	New PCU card for AT2000 AT2000 remote control system
SL2021-710	New procedure for honing of cylinder liners  Marine: L16/24, L21/31, L27/38, L23/30H, L28/32H  Stationary: L16/24S, L21/31S, L27/38S, L23/30S, L28/32S, V28/32H, V28/32S  Propulsion: L21/31, L27/38, L23/30A, L28/32A, V28/32A  Dual Fuel: L23/30DF, L28/32DF
SL2020-706	Fretting in main bearing bore (Replaces SL2017-645/JNN)  Marine: L21/31, L27/38, L23/30H, L28/32H  Stationary: L21/31S, L27/38S, L23/30S, L28/32S, V28/32S, V28/32H  Propulsion: L21/31, L27/38, L23/30, L23/30A, V23/30, V23/30A, L28/32, L28/32A, V28/32, V28/32A  Dual Fuel: L23/30DF, L28/32DF
SL2020-704	Inventory of hazardous materials  MAN B&W two-stroke and MAN four-stroke diesel engines
SL2020-702	Overspeed incident with disintegrated flywheel L23/30 and L28/32 GenSet & Propulsion
SL2020-700	Retrofitting of PLC (Replaces SL2012-564/JXN) L16/24, L21/31, L23/30H, L27/38, L28/32H, V28/32S, L32/40
SL2020-696	Inlet pressure settings for air starters  Marine: L27/38, L23/30H Mk3  Stationary: L27/38S, L23/30S Mk3  Propulsion: L28/32A, L27/38  Dual Fuel: L23/30DF, L28/32DF
SL2020-691	Fretting marks on piston crown and skirt assembly surfaces  Marine: L16/24, L21/31, L27/38, L23/30H Mk3  Stationary: L16/24S, L21/31S, L27/38S, L23/30S  Propulsion: L21/31, L27/38  Dual Fuel: L23/30DF, L28/32DF, V28/32D
SL2019-683	New release of spare part plate for engine safety filter  Marine: L16/24, L21/31, L27/38, L23/30H/DF, L28/32H/DF  Stationary: L16/24S, L21/31S, L27/38S, L23/30S, L28/32S V28/32H, V28/32S
SL2019-680	Hydraulic tightening pressure for connecting rod L23/30 series, GenSet
SL2019-679	Propeller Maintenance Concept  VBS MK3 and VBS MK5 All sizes



SL No.	<b>Title</b> Engine types
SL2019-678	Check of wiring for actuator  Marine: L16/24, L21/31, L27/38, L32/40, V32/40  Stationary: L16/24S, L21/31S, L27/38S  Propulsion: L21/31, L27/38, L32/40, V32/40  Dual Fuel: L23/30DF, L28/32DF
SL2019-677	Sulphur corrosion package  Marine: L21/31  Stationary: L21/31S
SL2019-676	Preparation for 2020 fuels  Marine: L16/24, L21/31, L27/38, L23/30H, L28/32H  Stationary: L21/31S, L27/38S, L23/30S, L28/32S, V28/32S, V28/32H
SL2018-667	<b>Ridge Wear at Crankpin Journals</b> (Replacement of SL2017-647/JNN)  Marine: L16/24, L21/31, L27/38, L23/30H, L28/32H  Stationary: L16/24S, L21/31S, L27/38S, L23/30S, L28/32S, V28/32H, V28/32S  Propulsion: L21/31, L27/38, L23/30(A), V23/30(A), L28/32(A), V28/32(A)  Dual Fuel: L23/30DF, L28/32DF
SL2018-666	Elongation Measurements of Hydraulically Tightened Bolts (Replacement of SL2018-656/JNN)  Marine: L16/24, L21/31, L27/38, L23/30H, L28/32H  Stationary: L21/31S, L27/38S, L23/30S, L28/32S, V28/32S, V28/32H  Propulsion: L21/31, L27/38, L23/30A, L28/32A, V28/32A  Dual Fuel: L23/30DF, L28/32DF
SL2018-661	New Piston Ring Package (Replacement of SL2018-657/JNN)  Marine: L23/30H  Stationary: L23/30S  Propulsion: L23/30A  Dual Fuel: L23/30DF
SL2018-657	New Piston Ring Package Replaced by SL2018-661
SL2018-656	Elongation Measurements of Hydraulically Tightened Bolts Replaced by SL2018-666
SL2017-654	Crankshaft Torsional Vibration Damper           Marine: L16/24, L21/31, L27/38           Stationary: L16/24S, L21/31S, L27/38S           Propulsion: L21/31, L27/38
SL2017-651	Splash Guarding, Connections in the fuel oil and lubricating oil system, Updating of SL2016-636/JWJ MAN B&W two-stroke and MAN four-stroke diesel engines
SL2017-649	Checking and Cleaning of Condensate Drain Trap in Charge Air Drain System  GenSet: L16/24, L21/31, L23/30H, L27/38, L28/32H  Stationary: L16/24S, L21/31S, L23/30S, L27/38S, L28/32S, V28/32S  Propulsion: L21/31, L28/32A  Dual Fuel: L23/30DF, L28/32DF, V28/32DF
SL2017-648	New Gasket Material for Roller Guide Housing  Marine: L23/30H  Stationary: L23/30S
SL2017-647	Ridge Wear at Crankpin Journals Replaced by SL2018-667
SL2017-645	Fretting/Corrosion in Main Bearing Bore Replaced by SL2020-706



SL No.	Title Engine types
SL2017-641	Fuel Valve Adjustment Marine: L16/24 Stationary: L16/24S
SL2017-640	Heavy Fuel Oil Cleaning (Removal of abrasive particles)  Marine: L16/24, L21/31, L23/30H, L27/38, L28/32H  Stationary: L16/24S, L21/31S, L23/30S, L27/38S, L28/32S, V28/32S  Propulsion: L21/31, L27/38, L23/30A, L28/32A
SL2017-639	New Design of High-Pressure Hydraulic Hoses, (Personnel safety - protective tubing)  Marine: L16/24, L21/31, L23/30H, L27/38, L28/32H  Stationary: L16/24S, L21/31S, L23/30S, L27/38S, L28/32S, V28/32S  Propulsion: L21/31, L27/38, L23/30A, V23/30A, L28/32A, V28/32A
SL2016-636	Splash Guarding , Connections in the fuel oil and lubricating oil system  MAN B&W two-stroke and MAN four-stroke diesel engines
SL2016-635	Fretting Marks on Connecting Rod Contact Surfaces Propulsion: L21/31, L27/38 GenSet: L21/31, L21/31S, L27/38S
SL2016-634	Ridge Wear at Crankpin Journals Replaced by SL2017-647
SL2016-631	Performance Test of Pilot Operated Check Valves (POCVs), Updating of SL13-575/BTT VBS Mk 3 all sizes
SL2016-630	Change-over to EAL in Propeller Servo Systems (Replacement of SL13-580/BTT) VBS Mk.1, Mk.2, Mk.3 and Mk.5
SL2016-629	Temperature Range for Propeller VB and VBS all sizes
SL2016-628	Fuel Injection Valve Condition L16/24, L23/30H, L21/31, L27/38, L28/32H, V28/32S
SL2016-627	Tightening of Roller Guide Housing (GenSet) L23/30H Tier I and II, L23/30H Mk2, L23/30S
SL2016-623	Cooling Water Treatment and Periodical Test of the Cooling Water Propulsion and GenSet
<del>SL2016-622</del>	Tightening of Roller Guide Housing (GenSet) Replaced by SL2016-627
SL2016-619	Tightening of Roller Guide Housing (Propulsion) L23/30AK
SL2016-618	Tightening of Roller Guide Housing (GenSet) Replaced by SL2016-622
SL2016-615	Fuel Oil Backflushing Filter L16/24, L21/31, L23/30H, L27/38, L28/32H, V28/32S
SL2015-610	IMO Tier II L23/30H L23/30H-720/750 rpm, IMO Tier II
SL2015-608	Valve Bridge Guide for L27/38 L27/38 GenSet and Propulsion Tier I and Tier II versions
SL2015-606	Check of Tightening of Connecting Rod L16/24, L21/31, L23/30, L27/38, L28/32, V28/32 (all types)



SL No.	Title Engine types
SL2015-605	Hydraulic Tightening Pressure for Connecting Rod Cancelled
SL2015-603	Publishing of Service Letters on the MAN Diesel & Turbo Website Propulsion and GenSets
SL2015-602	Maintenance and Pressure Test of Lube Oil Cooler L16/24, L21/31, L27/38, L23/30H, L23/30A, L28/32H, L28/32A, V28/32H
SL2015-601	Loosening of Plugs in Piston L28/32H, L28/32A, V28/32H, V28/32S, V28/32A, L23/30, L23/30H, L23/30A, V23/30, V23/30A
SL2015-600	Testing of Overspeed on L23/30H GenSets L23/30H GenSets
SL2015-597	High Exhaust Gas Temperatures and Turbine Cleaning L16/24, L21/31, L23/30H, L27/38, L28/32H, V28/32S
SL2014-595	Cleaning Procedure for Fuel Safety Filter (Supplement to SL13-577/KEL) L16/24, L21/31, L23/30H, L27/38, L28/32H, V28/32S
SL2014-594	Lubricating Oil Consumption L23/30H GenSet
SL2014-593	Guidelines for Operation on Fuels with less than 0.1% Sulphur  MAN B&W two-stroke marine diesel engines and Holeby GenSets
SL2014-588	L27/38 Propulsion Woodward Governor Top L27/38 Propulsion
SL2014-586	Handling of Tacho Failures and Reduction of Safety Risks in Plants with AT2000 PCS Propulsion L21/31 and L27/38
SL2014-585	Gear Servo Oil Pumps AMG (all models
SL2013-583	L16/24 Mk 2 Update Package
SL2013-582	<b>Lube Oil Treatment</b> :L16/24, L21/31, L23/30H, L27/38, L28/32H, V28/32S
SL2013-580	Change-over to EAL in Propeller Servo Systems Replaced by SL2016-630
SL2013-578	Change-over to EAL (Environmentally Acceptable Lubricant) in stern tube and propeller hub "VB" and "VBS"
SL2013-577	Fuel Safety Filter L16/24, L21/31, L23/30H, L27/38, L28/32H, V28/32S
SL2013-575	Performance Test of Pilot Operated Check Valves (POCVs) Replaced by SL2016-631
SL2013-570	Backup Operation of AT2000 PCS
SL2012-565	Exhaust Gas Temperature Sensors, GenSets GenSet L21/31 and L27/38 Tier II (Engines delivered after 1st January 2011)
SL2012-564	Retrofitting of Old PLC, Type CS31 and AC1131 Replaced by SL2020-700
	-



SL No.	<b>Title</b> Engine types
SL2012-563	A New Service for Four-stroke Medium Speed GenSets and Propulsion L16/24, L21/31, L27/38, L32/40CD and V28/32S
SL2012-560	L16/24 Mk. 2 Update Package Replaced by SL13-583
SL2012-559	Valve Adjustment Procedure GenSet L16/24, L21/31, L27/38 Propulsion L21/31, L27/38
SL2012-557	Tightening Torque L21/31 L21/31 GenSet
SL2012-556	New Low Sac Nozzle L21/31 Tier I, GenSet and Propulsion
SL2012-555	Fuel Oil Piping L27/38 Propulsion
SL2011-551	Cylinder Head (broken studs / incorrect type of nuts)
SL2011-550	Turning Valve Bridge
SL2011-547	New Shaft Sealings for Cooling Water Pumps
SL2011-546	Update of Software in Propulsion Control System
SL2011-545	New Improved Site for Service Letters
SL2011-541	Fatigue Piston Cracks on L23/30-series Engines
SL2010-538	New Spring Loaded Seals for Fuel
SL2010-536	Broken Camshaft Bolts (M16 - Quality 12.9)
SL2010-535	Cylinder Condition
SL2010-532	ALERT Service Bulletin - Product Recall Action - ASB2010/03/01
SL2010-531	ALERT Service Bulletin - Product Recall Action - ASB2009/12/23
SL2010-528	Service Letter in Electronic Form
SL2010-527	Updated Quality of Fuel Oil
SL2010-525	Fuel Injection Valve Test
SL2010-523	L16/24 GenSets 2008 Update PrimeServ Retrofitting
SL2010-518	New Course Catalogue of MAN Diesel PrimeServ Academies
SL2009-519	Full Flow High Pressure Filters
SL2009-517	Updated Valve Adjustment Procedure
SL2009-516	Keeping Fuel Rack Position in Zero Position in Case of Two Faulty RPM Pick-ups
SL2009-508	Shaft for Roller at Inlet and Exhaust Valve Guide
SL2009-506	Lifting Tools for Cylinder Unit, Cylinder Liner and Dismantling Tool for Bearing Shell
SL2009-505	New Low Sack Nozzle
SL2008-500	Additional Inspection of Connecting Rods



SL No.	<b>Title</b> Engine types
SL2008-494	Exchange of Old ABB CS31 PLC with MicroLogix 1500 PLC from Allen-Bradley
SL2008-493	Exchange of Old ABB CS32 PLC with New ABB AC1131 PLC
SL2007-489	Recall of Connecting Rod Bolts for L23/30H and L28/32H
SL2007-487	Release of New Improved Type of Oil Filter Cartridge
SL2007-486	Bracket for Guidance of Cam Followers on L21/31 Engines
SL2007-485	Service Letter in Electronic Form
SL2007-472	Special Handling of Propeller Blade Screws, Re-fitting
SL2007-470	Propeller VBS-ODS Pitch Feedback System, Item 1
SL2006-468	Inspection and Exchange of Allen-Bradley PLC
SL2005-459	Unintended Loosening of Plugs and Restriction in Piston
SL2005-458	New Relay / Control Box
SL2005-457	Maintenance of the Automatic Lubricating Oil Filter
SL2005-450	Gasket Kit for Cylinder Unit
SL2004-443	Installation of Filter Protection Valve (FP Valve) on the Automatic Lubricating Oil Filter
SL2004-435	Check of Hydraulic Tools - Personnel Safety at Risk
SL2004-434	Maintenance Procedure of Lubricating Oil Filter
SL2004-433	New Piston Ring Package for L/V28/32H with Flame Ring Type Piston
SL2003-430	Inspection and Exchange of Danfoss Pressure Transmitters
SL2003-425	Inspection and Exchange of MAN Exhaust Valve Spindle
SL2003-422	Solas Requirement / Jacketed High Pressure Fuel Pipes
SL2002-411	Solas Requirement / Jacketed High Pressure Fuel Pipes
SL2002-410	Electronic Equipment on Engine Type L27/38 GenSet
SL2002-387	Check of Fuel Oil Piping System
SL2001-392	Cylinder Oils for MC Engines Operating on Low Sulphur Fuels
SL2001-189	Examination of Piston (Only of the MAHLE Type Already Manufactured)
SL2000-380	Check of Fuel Oil System Piping System
SL2000-379	Classification of Service Lettes
SL1999-371	Cylinder Covers
SL1999-364	Year 2000 Product Compliance
SL1999-363	Gasket Kit for Cylinder Unit
SL1998-188	Tightening Procedure for Connecting Rod Screws
SL1998-187	Modification of Piston Ring Package to Include a Nose Minute Ring



SL No.	Title Engine types
SL1998-186	Cooling Water Treatment
SL1998-185	Examination of Exhaust Gas Valve Spindle
SL1998-184	O-ring for Water Guide Jacket
SL1998-183	Adjustment Washer between Thrust Pin and Thrust Piece
SL1998-182	Examintation of Piston Pin Bush
SL1998-181	Examination of Piston Pin
SL1997-350	Damage of Main Bearings on Rigidly Mounted Auxiliary Engines Caused by External Vibrations from the Hull Structure
SL1997-349	Gasket Kits for Cylinder Unit
SL1997-335	Adjustment of Camshaft and Maximum Combustion Pressure
SL1997-180	Sealing with PERMATEX 300 Super between Engine Frame and Stud for Cylinder Head
SL1997-179	Modification of Bearings and Holding Screw on NR20 Turbocharger
SL1996-338	Gasket Kits for Cylinder Unit
SL1996-336	Alternative Dimension of Bearing Shells Available for Main, Guide and Crankpin Bearings as well as Oversize Thrust Pieces for the Above-Mentioned Engine Types
SL1996-178	Revised Instruction Concerning Control and Possible Repair to Valve Seat Rings
SL1995-331	New Design of Crankpin Bearing and Main and Guide Bearing
SL1994-325	Monobloc Pistons Made of Nodular Cast Iron with Hardened Ring Grooves
SL1994-321	Reconditioning of Connecting Rods
SL1994-320	Safety Valve
SL1994-314	Starters Based on Air Motors of the Vane Type
SL1994-177	New Fuel Oil Pumps
SL1993-311	Removal of Nozzle Cooling
SL1993-310	Check and Adjustment of Fuel Injection Valves
SL1992-299	Valve Seat Rings
SL1992-298	Valve Seat Rings
SL1992-297	Sticking Fuel Pumps on Engine Operating on HFO
SL1992-296	Fuel Injection Pumps Modified Plunger / Barrel Unit
SL1992-290	Securing of the Piston Pin Position in the Piston on B&W Diesel Engines, Type DM 25 MTBH(S)-40
SL1992-176	Milling of Frame Top Surface
SL1991-289	Service Information on Turbochargers
SL1991-288	Connecting Rods for B&W Diesel Engines, Type DM 26 MTBH(S)(F)-40
SL1991-284	Introduction of Rillenlager for 23 and 28 Engines



SL No.	<b>Title</b> Engine types
SL1991-274	Piston and Connecting Rods. Combination of Scraper Rings
SL1991-175	Modification of Ring Package
SL1990-270	Lubrication
SL1990-257	Loop Expansion Joint for Fuel Oil Outlet and Inlet
SL1990-174	Modification in Torsional Vibration Damper
SL1989-255	Condensation of Water in the Charge Air Receiver
SL1989-254	Cleaning of the MAN B&W Turbochargers NR and NR/R Type
SL1989-252	Scale and Corrosion Control in Freshwater Cooling Systems
SL1989-173	Fuel Oil High Pressure Pipe
SL1989-172	Modification of Fuel Injection Pump Element
SL1988-242	Flexible Steel Pipe Connection for Fuel Oil Outlet and Inlet
SL1988-235	Chemical Attack of Flexible Hose Connections of the Type AEROQUIP FC350 Caused by the Decreasing Quality of HFO
SL1988-229	Transverse Play of Rotor
SL1988-228	Dismantling and Reassembling of Cartridge
SL1988-227	Wear Resistant Turbine Nozzle Ring for the MAN B&W Turbochargers
SL1987-215	Piston
SL1987-171	Inspection of Vibration Damper
SL1986-166	SSV-piston
SL1984-204	Blending Unit Booster Pumps in AOB and UF Installations
SL1984-165	Inlet and Exhaust Valves
SL1984-163	Rotocap on Inlet Valves
SL1984-161	Connection Rod, Old and New Designs
SL1983-195	Grey Cast Iron Piston
SL1983-160	Slit Filter on Fuel Injection Valve
SL1983-159	Crack Examination of Piston
SL1982-188	Conversion to Operation on Intermediate Fuel
SL1982-186	Piston
SL1982-185	Connecting Rod, Retightening
SL1982-158	Tightening Moment of Main Bearing Caps
SL1982-157	Torsional Vibration Damper
SL1982-155	Grinding of Valve Seat Rings



SL No.	Title Engine types
SL1981-183	Checking of Regulating System of the Fuel Pump when Operating on Low Quality Fuel Oils
SL1981-176	Re-honing of Cylinder Liners
SL1981-174	Mounting of Main Bearing Temperature Sensors
SL1981-173	Counterweights on Crankshaft
SL1981-172	Counterweights on Crankshaft
SL1981-154	Cleaning of Fuel Nozzles
SL1981-153	Tighten-up of Screws, Counterweights
SL1981-152	Tighten-up of Screws, Counterweights
SL1981-151	Temperature Sensors in Main Bearing
SL1981-150	Piston
SL1981-149	Shaft Sealing
SL1981-148	Inlet Valves and Exhaust Valves
SL1981-147	Inlet Valves and Exhaust Valves
SL1981-146	Connecting Rod
SL1981-145	Connecting Rod
SL1981-144	High Pressure Fuel Pipes
SL1981-142	Protection of the Gearbox Oil Pumps
SL1981-141	Blind Plate for Cooling Water Pipes
SL1981-140	Checking of Suction Filters
SL1980-137	Overspeed Stop
SL1980-136	Flange Screw for Propeller Hub
SL1980-133	High Pressure Fuel Pipe
SL1980-132	Stud for Cylinder Cover
SL1980-131	Valve Rotator (Rotocap) on Exhaust Valve
SL1979-152	Sealing between Cylinder Liner and Engine Frame
SL1979-151	Scraper Rings for Pistons
SL1979-150	Fuel Valve Sealing
SL1979-143	Cleaning Systems for Turbochargers
SL1979-141	Fuel Pump Index Alteration when Operating on Heavy Fuel
SL1979-139	Indicator Cocks
SL1979-130	Piston for Cooling and Bilge Pump
SL1979-129	Replacement of Filter Cartridges



SL1979-128 Piston, Fractures in Pin-boss SL1979-126 Fuel Pump Index Reduction SL1979-127 Nozzle and Holder for Fuel Valve SL1979-123 Nozzle and Holder for Fuel Valve SL1978-123 Starting Air Distributor SL1978-131 Two-valve Cylinder Cover - Gas Leakages SL1978-131 Two-valve Cylinder Cover - Gas Leakages SL1978-130 Fuel Pumps - Bosch Fuel Pumps SL1977-116 Conical Valve Retainers SL1977-102 Starting Air Distributor SL1977-009 Big End Bearing Shells SL1977-009 Big End Bearing Shells SL1977-087 Connecting Rod Bolts - Tightening Instruction SL1978-084 Paper Cartridges in Lube Oil Filters SL1978-081 Bearings for Crankshaft with Reduced Diameter SL1978-093 Starting Valve SL1978-075 Thermo Feelers for Bearing Supervision SL1978-117 Oil Collector in Piston SL1978-117 Screws for Piston Pin SL1978-073 Tightening of Studs for Cylinder Cover SL1978-096 SL1978-097 SL1978-098 Lubrication of Claw Coupling for Lube Oil Pumps SL1978-098 Lubrication of Claw Coupling for Lube Oil Pumps SL1978-098 SL1978-098 Lubrication of Claw Coupling for Lube Oil Pumps SL1978-098 SL1978-098 Lubrication of Claw Coupling for Lube Oil Pumps SL1978-097 Separate Valve Seat Rings SL1978-049 Clearance of Valve Gear SL1973-044 Main Bearings SL1973-044 Main Bearings SL1973-047 Tightening of Strews for Piston Pin	SL No.	Title Engine types
SL1979-124 Nozzle and Holder for Fuel Valve SL1978-138 Starting Air Distributor SL1978-131 Two-valve Cylinder Cover – Gas Leakages SL1978-130 Fuel Pumps – Bosch Fuel Pumps SL1977-102 Starting Air Distributor SL1977-102 Starting Air Distributor SL1977-091 Big End Bearing Shells SL1977-090 Big End Bearing Shells SL1977-097 Connecting Rod Bolts – Tightening Instruction SL1978-120 Hydraulic Tool SL1978-081 Bearings for Crankshaft with Reduced Diameter SL1978-080 Nozzle Cooling SL1978-079 Starting Valve SL1978-079 SL1978-079 Starting Valve SL1978-170 SL1978-171 Oil Collector in Piston SL1978-173 Tightening of Studs for Cylinder Cover SL1978-073 Tightening of Studs for Cylinder Cover SL1978-080 SL1978-080 Hydraulic Jacks for Tightening Studs and Bolt Connections etc. SL1978-080 SL1978-080 SL1978-080 SL1978-080 SL1978-070 Operation on Heavy Fuel SL1978-070 SL1978-070 Starting Valve SL1978-070 SL1978-080 SL1978-080 SL1978-080 SL1978-070 Operation on Heavy Fuel SL1978-080 S	SL1979-128	Piston, Fractures in Pin-boss
SL1979-123 Nozzle and Holder for Fuel Valve SL1978-138 Starting Air Distributor SL1978-139 Two-valve Cylinder Cover - Gas Leakages SL1978-130 Fuel Pumps - Bosch Fuel Pumps SL1977-116 Conical Valve Retainers SL1977-102 Starting Air Distributor SL1977-091 Big End Bearing Shells SL1977-093 Big End Bearing Shells SL1977-094 Big End Bearing Shells SL1977-095 Connecting Rod Bolts - Tightening Instruction SL1976-120 Hydraulic Tool SL1976-084 Paper Cartridges in Lube Oil Filters SL1976-084 Bearings for Crankshaft with Reduced Diameter SL1976-080 Nozzle Cooling SL1976-079 Starting Valve SL1976-075 Thermo Feelers for Bearing Supervision SL1975-117 Oil Collector in Piston SL1975-118 Screws for Piston Pin SL1975-119 SL1975-070 Operation on Heavy Fuel SL1976-089 Hydraulic Jacks for Tightening Studs and Bolt Connections etc. SL1978-082 Lubrication of Claw Coupling for Lube Oil Pumps SL1973-113 Diamantling of Threaded Joints SL1973-044 Main Bearings	SL1979-126	Fuel Pump Index Reduction
SL1978-138 Starting Air Distributor  SL1978-131 Two-valve Cylinder Cover - Gas Leakages  SL1978-130 Fuel Pumps - Bosch Fuel Pumps  SL1977-116 Conical Valve Retainers  SL1977-102 Starting Air Distributor  SL1977-091 Big End Bearing Shells  SL1977-090 Big End Bearing Shells  SL1977-087 Connecting Rod Bolts - Tightening Instruction  SL1976-084 Paper Cartridges in Lube Oil Filters  SL1976-084 Paper Cartridges in Lube Oil Filters  SL1976-080 Nozzle Cooling  SL1976-075 Thermo Feelers for Bearing Supervision  SL1976-171 Oil Collector in Piston  SL1975-175 Screws for Piston Pin  SL1975-176 Stud for Main Bearing  SL1975-070 Operation on Heavy Fuel  SL1975-080 Hydraulic Jacks for Tightening Studs and Bolt Connections etc.  SL1975-082 Lubrication of Claw Coupling for Lube Oil Pumps  SL1973-093 Separate Valve Seat Rings  SL1973-094 Clearance of Valve Gear  SL1973-094 Accessories for Hydraulic Tools for Tightening of Bolt Connections, etc.  SL1973-094 Main Bearings	SL1979-124	Nozzle and Holder for Fuel Valve
SL1978-131 Two-valve Cylinder Cover – Gas Leakages  SL1978-130 Fuel Pumps – Bosch Fuel Pumps  SL1977-116 Conical Valve Retainers  SL1977-091 Big End Bearing Shells  SL1977-092 Big End Bearing Shells  SL1977-093 Connecting Rod Bolts – Tightening Instruction  SL1976-120 Hydraulic Tool  SL1976-084 Paper Cartridges in Lube Oil Filters  SL1976-084 Bearings for Crankshaft with Reduced Diameter  SL1976-080 Nozzle Cooling  SL1976-079 Starting Valve  SL1976-075 Thermo Feelers for Bearing Supervision  SL1975-117 Oil Collector in Piston  SL1975-117 Screws for Piston Pin  SL1975-073 Tightening of Studs for Cylinder Cover  SL1975-070 Operation on Heavy Fuel  SL1975-070 Coperation on Heavy Fuel  SL1975-080 Exhaust Valves  SL1975-082 Lubrication of Claw Coupling for Lube Oil Pumps  SL1975-082 Lubrication of Claw Coupling for Lube Oil Pumps  SL1973-045 Separate Valve Seat Rings  SL1973-045 Accessories for Hydraulic Tools for Tightening of Bolt Connections, etc.	SL1979-123	Nozzle and Holder for Fuel Valve
SL1978-130 Fuel Pumps – Bosch Fuel Pumps SL1977-116 Conical Valve Retainers SL1977-02 Starting Air Distributor SL1977-091 Big End Bearing Shells SL1977-092 Big End Bearing Shells SL1977-087 Connecting Rod Bolts – Tightening Instruction SL1976-084 Paper Cartridges in Lube Oil Filters SL1976-084 Bearings for Crankshaft with Reduced Diameter SL1976-080 Nozzle Cooling SL1976-079 Starting Valve SL1976-075 Thermo Feelers for Bearing Supervision SL1975-117 Oil Collector in Piston SL1975-118 Screws for Piston Pin SL1975-073 Tightening of Studs for Cylinder Cover SL1975-069 Hydraulic Jacks for Tightening Studs and Bolt Connections etc. SL1975-062 Lubrication of Claw Coupling for Lube Oil Pumps SL1973-045 Separate Valve Seat Rings SL1973-045 Accessories for Hydraulic Tools for Tightening of Bolt Connections, etc.	SL1978-138	Starting Air Distributor
SL1977-116 Conical Valve Retainers  SL1977-102 Starting Air Distributor  SL1977-091 Big End Bearing Shells  SL1977-093 Big End Bearing Shells  SL1977-096 Connecting Rod Bolts – Tightening Instruction  SL1976-084 Paper Cartridges in Lube Oil Filters  SL1976-081 Bearings for Crankshaft with Reduced Diameter  SL1976-080 Nozzle Cooling  SL1976-079 Starting Valve  SL1976-075 Thermo Feelers for Bearing Supervision  SL1975-117 Oil Collector in Piston  SL1975-115 Screws for Piston Pin  SL1975-073 Tightening of Studs for Cylinder Cover  SL1975-070 Operation on Heavy Fuel  SL1975-080 Exhaust Valves  SL1975-080 Exhaust Valves  SL1975-081 Separate Valve Seat Rings  SL1973-093 Dismantling of Threaded Joints  SL1973-094 Accessories for Hydraulic Tools for Tightening of Bolt Connections, etc.  SL1973-094 Main Bearing	SL1978-131	Two-valve Cylinder Cover – Gas Leakages
SL1977-102 Starting Air Distributor SL1977-091 Big End Bearing Shells SL1977-087 Connecting Rod Bolts – Tightening Instruction SL1976-084 Paper Cartridges in Lube Oil Filters SL1976-084 Paper Cartridges in Lube Oil Filters SL1976-080 Nozzle Cooling SL1976-079 Starting Valve SL1976-075 Thermo Feelers for Bearing Supervision SL1975-117 Oil Collector in Piston SL1975-115 Screws for Piston Pin SL1975-114 Stud for Main Bearing SL1975-073 Tightening of Studs for Cylinder Cover SL1975-080 Hydraulic Jacks for Tightening Studs and Bolt Connections etc. SL1975-080 SL1975-080 SL1975-080 SL1975-080 SL1975-080 SL1975-080 SL1975-080 SL1973-080	SL1978-130	Fuel Pumps - Bosch Fuel Pumps
SL1977-091 Big End Bearing Shells SL1977-092 Big End Bearing Shells SL1977-087 Connecting Rod Bolts – Tightening Instruction SL1976-120 Hydraulic Tool SL1976-084 Paper Cartridges in Lube Oil Filters SL1976-088 Bearings for Crankshaft with Reduced Diameter SL1976-080 Nozzle Cooling SL1976-079 Starting Valve SL1976-075 Thermo Feelers for Bearing Supervision SL1975-117 Oil Collector in Piston SL1975-115 Screws for Piston Pin SL1975-114 Stud for Main Bearing SL1975-073 Tightening of Studs for Cylinder Cover SL1975-070 Operation on Heavy Fuel SL1975-080 Exhaust Valves SL1975-080 Exhaust Valves SL1975-080 Lubrication of Claw Coupling for Lube Oil Pumps SL1973-113 Dismantling of Threaded Joints SL1973-049 Clearance of Valve Gear SL1973-044 Main Bearings	SL1977-116	Conical Valve Retainers
SL1977-090 Big End Bearing Shells SL1977-087 Connecting Rod Bolts – Tightening Instruction SL1976-020 Hydraulic Tool SL1976-084 Paper Cartridges in Lube Oil Filters SL1976-080 Nozzle Cooling SL1976-079 Starting Valve SL1976-075 Thermo Feelers for Bearing Supervision SL1975-117 Oil Collector in Piston SL1975-118 Stud for Main Bearing SL1975-119 Stud for Main Bearing SL1975-073 Tightening of Studs for Cylinder Cover SL1975-070 Operation on Heavy Fuel SL1975-080 Exhaust Valves SL1975-080 Exhaust Valves SL1975-080 Exhaust Valves SL1975-090 Clearance of Valve Gear SL1973-040 Clearance of Valve Gear SL1973-044 Main Bearings	SL1977-102	Starting Air Distributor
SL1977-087 Connecting Rod Bolts - Tightening Instruction  SL1976-120 Hydraulic Tool  SL1976-084 Paper Cartridges in Lube Oil Filters  SL1976-081 Bearings for Crankshaft with Reduced Diameter  SL1976-080 Nozzle Cooling  SL1976-079 Starting Valve  SL1976-075 Thermo Feelers for Bearing Supervision  SL1975-117 Oil Collector in Piston  SL1975-115 Screws for Piston Pin  SL1975-114 Stud for Main Bearing  SL1975-073 Tightening of Studs for Cylinder Cover  SL1975-070 Operation on Heavy Fuel  SL1975-089 Hydraulic Jacks for Tightening Studs and Bolt Connections etc.  SL1975-080 Exhaust Valves  SL1975-062 Lubrication of Claw Coupling for Lube Oil Pumps  SL1973-113 Dismantling of Threaded Joints  SL1973-044 Accessories for Hydraulic Tools for Tightening of Bolt Connections, etc.	SL1977-091	Big End Bearing Shells
SL1976-120 Hydraulic Tool  SL1976-084 Paper Cartridges in Lube Oil Filters  SL1976-081 Bearings for Crankshaft with Reduced Diameter  SL1976-080 Nozzle Cooling  SL1976-079 Starting Valve  SL1976-075 Thermo Feelers for Bearing Supervision  SL1975-117 Oil Collector in Piston  SL1975-115 Screws for Piston Pin  SL1975-114 Stud for Main Bearing  SL1975-073 Tightening of Studs for Cylinder Cover  SL1975-070 Operation on Heavy Fuel  SL1975-069 Hydraulic Jacks for Tightening Studs and Bolt Connections etc.  SL1975-068 Exhaust Valves  SL1975-062 Lubrication of Claw Coupling for Lube Oil Pumps  SL1973-013 Dismantling of Threaded Joints  SL1973-045 Accessories for Hydraulic Tools for Tightening of Bolt Connections, etc.  SL1973-044 Main Bearings	SL1977-090	Big End Bearing Shells
SL1976-084 Paper Cartridges in Lube Oil Filters  SL1976-081 Bearings for Crankshaft with Reduced Diameter  SL1976-080 Nozzle Cooling  SL1976-079 Starting Valve  SL1976-075 Thermo Feelers for Bearing Supervision  SL1975-117 Oil Collector in Piston  SL1975-118 Screws for Piston Pin  SL1975-114 Stud for Main Bearing  SL1975-073 Tightening of Studs for Cylinder Cover  SL1975-070 Operation on Heavy Fuel  SL1975-069 Hydraulic Jacks for Tightening Studs and Bolt Connections etc.  SL1975-068 Exhaust Valves  SL1975-062 Lubrication of Claw Coupling for Lube Oil Pumps  SL1974-057 Separate Valve Seat Rings  SL1973-019 Clearance of Valve Gear  SL1973-044 Main Bearings	SL1977-087	Connecting Rod Bolts – Tightening Instruction
SL1976-081 Bearings for Crankshaft with Reduced Diameter  SL1976-080 Nozzle Cooling  SL1976-079 Starting Valve  SL1976-075 Thermo Feelers for Bearing Supervision  SL1975-117 Oil Collector in Piston  SL1975-118 Screws for Piston Pin  SL1975-114 Stud for Main Bearing  SL1975-070 Operation on Heavy Fuel  SL1975-070 Operation on Heavy Fuel  SL1975-068 Exhaust Valves  SL1975-068 Exhaust Valves  SL1975-062 Lubrication of Claw Coupling for Lube Oil Pumps  SL1973-113 Dismantling of Threaded Joints  SL1973-049 Clearance of Valve Gear  SL1973-044 Main Bearings	SL1976-120	Hydraulic Tool
SL1976-080 Nozzle Cooling SL1976-079 Starting Valve SL1976-075 Thermo Feelers for Bearing Supervision SL1975-117 Oil Collector in Piston SL1975-115 Screws for Piston Pin SL1975-114 Stud for Main Bearing SL1975-073 Tightening of Studs for Cylinder Cover SL1975-070 Operation on Heavy Fuel SL1975-069 Hydraulic Jacks for Tightening Studs and Bolt Connections etc. SL1975-068 Exhaust Valves SL1975-062 Lubrication of Claw Coupling for Lube Oil Pumps SL1974-057 Separate Valve Seat Rings SL1973-113 Dismantling of Threaded Joints SL1973-049 Clearance of Valve Gear SL1973-044 Main Bearings	SL1976-084	Paper Cartridges in Lube Oil Filters
SL1976-079 Starting Valve  SL1976-075 Thermo Feelers for Bearing Supervision  SL1975-117 Oil Collector in Piston  SL1975-115 Screws for Piston Pin  SL1975-114 Stud for Main Bearing  SL1975-073 Tightening of Studs for Cylinder Cover  SL1975-070 Operation on Heavy Fuel  SL1975-069 Hydraulic Jacks for Tightening Studs and Bolt Connections etc.  SL1975-068 Exhaust Valves  SL1975-062 Lubrication of Claw Coupling for Lube Oil Pumps  SL1973-057 Separate Valve Seat Rings  SL1973-013 Dismantling of Threaded Joints  SL1973-049 Clearance of Valve Gear  SL1973-044 Main Bearings	SL1976-081	Bearings for Crankshaft with Reduced Diameter
SL1976-075 Thermo Feelers for Bearing Supervision  SL1975-117 Oil Collector in Piston  SL1975-115 Screws for Piston Pin  SL1975-114 Stud for Main Bearing  SL1975-073 Tightening of Studs for Cylinder Cover  SL1975-070 Operation on Heavy Fuel  SL1975-069 Hydraulic Jacks for Tightening Studs and Bolt Connections etc.  SL1975-068 Exhaust Valves  SL1975-062 Lubrication of Claw Coupling for Lube Oil Pumps  SL1973-045 Separate Valve Seat Rings  SL1973-049 Clearance of Valve Gear  SL1973-044 Main Bearings	SL1976-080	Nozzle Cooling
SL1975-117 Oil Collector in Piston  SL1975-115 Screws for Piston Pin  SL1975-114 Stud for Main Bearing  SL1975-073 Tightening of Studs for Cylinder Cover  SL1975-070 Operation on Heavy Fuel  SL1975-069 Hydraulic Jacks for Tightening Studs and Bolt Connections etc.  SL1975-068 Exhaust Valves  SL1975-062 Lubrication of Claw Coupling for Lube Oil Pumps  SL1974-057 Separate Valve Seat Rings  SL1973-013 Dismantling of Threaded Joints  SL1973-049 Clearance of Valve Gear  SL1973-045 Accessories for Hydraulic Tools for Tightening of Bolt Connections, etc.  SL1973-044 Main Bearings	SL1976-079	Starting Valve
SL1975-115 Screws for Piston Pin  SL1975-114 Stud for Main Bearing  SL1975-073 Tightening of Studs for Cylinder Cover  SL1975-070 Operation on Heavy Fuel  SL1975-069 Hydraulic Jacks for Tightening Studs and Bolt Connections etc.  SL1975-068 Exhaust Valves  SL1975-062 Lubrication of Claw Coupling for Lube Oil Pumps  SL1974-057 Separate Valve Seat Rings  SL1973-113 Dismantling of Threaded Joints  SL1973-049 Clearance of Valve Gear  SL1973-045 Accessories for Hydraulic Tools for Tightening of Bolt Connections, etc.  SL1973-044 Main Bearings	SL1976-075	Thermo Feelers for Bearing Supervision
SL1975-114 Stud for Main Bearing  SL1975-073 Tightening of Studs for Cylinder Cover  SL1975-070 Operation on Heavy Fuel  SL1975-069 Hydraulic Jacks for Tightening Studs and Bolt Connections etc.  SL1975-068 Exhaust Valves  SL1975-062 Lubrication of Claw Coupling for Lube Oil Pumps  SL1974-057 Separate Valve Seat Rings  SL1973-113 Dismantling of Threaded Joints  SL1973-049 Clearance of Valve Gear  SL1973-045 Accessories for Hydraulic Tools for Tightening of Bolt Connections, etc.  SL1973-044 Main Bearings	SL1975-117	Oil Collector in Piston
SL1975-073 Tightening of Studs for Cylinder Cover  SL1975-070 Operation on Heavy Fuel  SL1975-069 Hydraulic Jacks for Tightening Studs and Bolt Connections etc.  SL1975-068 Exhaust Valves  SL1975-062 Lubrication of Claw Coupling for Lube Oil Pumps  SL1974-057 Separate Valve Seat Rings  SL1973-113 Dismantling of Threaded Joints  SL1973-049 Clearance of Valve Gear  SL1973-045 Accessories for Hydraulic Tools for Tightening of Bolt Connections, etc.  SL1973-044 Main Bearings	SL1975-115	Screws for Piston Pin
SL1975-070 Operation on Heavy Fuel  SL1975-069 Hydraulic Jacks for Tightening Studs and Bolt Connections etc.  SL1975-068 Exhaust Valves  SL1975-062 Lubrication of Claw Coupling for Lube Oil Pumps  SL1974-057 Separate Valve Seat Rings  SL1973-113 Dismantling of Threaded Joints  SL1973-049 Clearance of Valve Gear  SL1973-045 Accessories for Hydraulic Tools for Tightening of Bolt Connections, etc.  SL1973-044 Main Bearings	SL1975-114	Stud for Main Bearing
SL1975-069 Hydraulic Jacks for Tightening Studs and Bolt Connections etc.  SL1975-068 Exhaust Valves  SL1975-062 Lubrication of Claw Coupling for Lube Oil Pumps  SL1974-057 Separate Valve Seat Rings  SL1973-113 Dismantling of Threaded Joints  SL1973-049 Clearance of Valve Gear  SL1973-045 Accessories for Hydraulic Tools for Tightening of Bolt Connections, etc.  SL1973-044 Main Bearings	SL1975-073	Tightening of Studs for Cylinder Cover
SL1975-068 Exhaust Valves  SL1975-062 Lubrication of Claw Coupling for Lube Oil Pumps  SL1974-057 Separate Valve Seat Rings  SL1973-113 Dismantling of Threaded Joints  SL1973-049 Clearance of Valve Gear  SL1973-045 Accessories for Hydraulic Tools for Tightening of Bolt Connections, etc.  SL1973-044 Main Bearings	SL1975-070	Operation on Heavy Fuel
SL1975-062 Lubrication of Claw Coupling for Lube Oil Pumps  SL1974-057 Separate Valve Seat Rings  SL1973-113 Dismantling of Threaded Joints  SL1973-049 Clearance of Valve Gear  SL1973-045 Accessories for Hydraulic Tools for Tightening of Bolt Connections, etc.  SL1973-044 Main Bearings	SL1975-069	Hydraulic Jacks for Tightening Studs and Bolt Connections etc.
SL1974-057 Separate Valve Seat Rings SL1973-113 Dismantling of Threaded Joints SL1973-049 Clearance of Valve Gear SL1973-045 Accessories for Hydraulic Tools for Tightening of Bolt Connections, etc. SL1973-044 Main Bearings	SL1975-068	Exhaust Valves
SL1973-113 Dismantling of Threaded Joints SL1973-049 Clearance of Valve Gear SL1973-045 Accessories for Hydraulic Tools for Tightening of Bolt Connections, etc. SL1973-044 Main Bearings	SL1975-062	Lubrication of Claw Coupling for Lube Oil Pumps
SL1973-049 Clearance of Valve Gear SL1973-045 Accessories for Hydraulic Tools for Tightening of Bolt Connections, etc. SL1973-044 Main Bearings	SL1974-057	Separate Valve Seat Rings
SL1973-045 Accessories for Hydraulic Tools for Tightening of Bolt Connections, etc.  SL1973-044 Main Bearings	SL1973-113	Dismantling of Threaded Joints
SL1973-044 Main Bearings	SL1973-049	Clearance of Valve Gear
· <del></del>	SL1973-045	Accessories for Hydraulic Tools for Tightening of Bolt Connections, etc.
SL1972-107 Tightening of Screws for Piston Pin	SL1973-044	Main Bearings
	SL1972-107	Tightening of Screws for Piston Pin



Title
Engine types
Studs for Fuel Oil Pumps
Main Bearings
Main Bearings
Connecting Rod Bolts
Slipping of Crankshaft
Stern Tube Stuffing Boxes, Type Mu/Mi
Rubber Rings on Cylinder Liner
Cast Iron Pistons
Water Washing of Turbochargers
Clamping of Balance Weights
Crankshafts